




Introduction

The Mud Flap and Splash Guard Kit is designed to provide added protection against rocks and small road debris that can accelerate elemental wear and tear on your vehicle's body and paint. If you drive on roads where heavy salt, sand, or gravel are commonly used to improve winter road conditions, installing this kit is the recommended way to protect your vehicle.

What's in the Box?

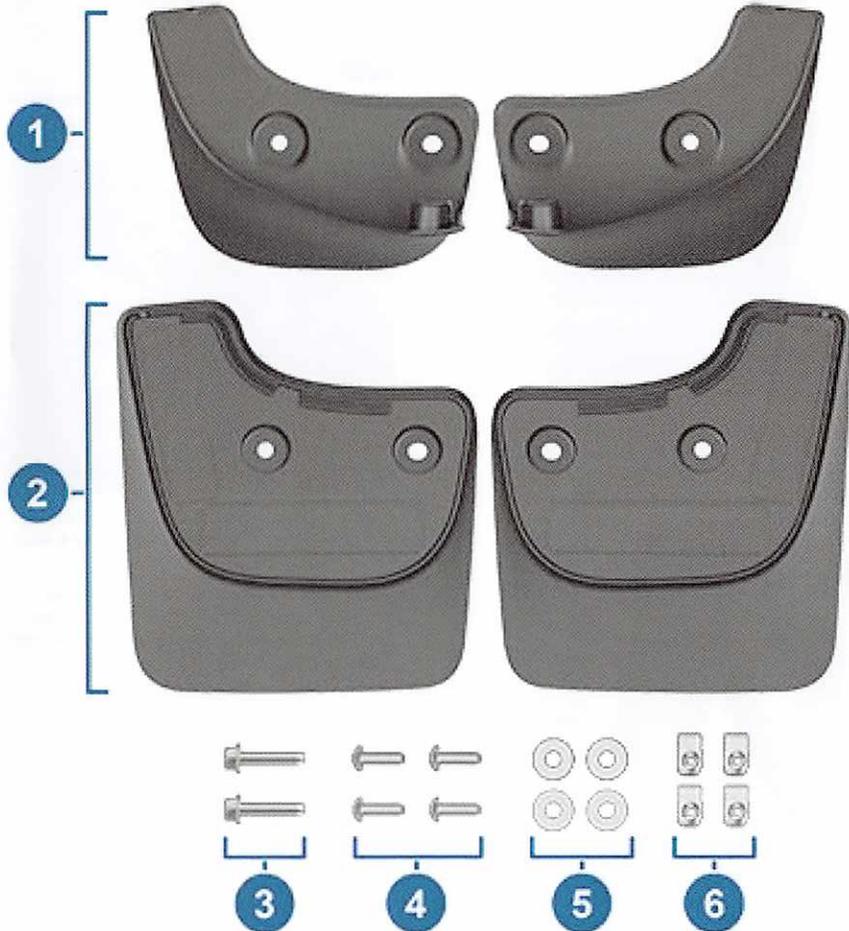

1. Mud flap (x2)	3. Bolt (x2)	5. Washer (x4)
2. Splash guard (x2)	4. Screw (x4)	6. U-nut (x4)



MODEL 3

MUD FLAP AND SPLASH GUARD KIT INSTALLATION





1. Clean the installation area with alcohol and allow to fully dry before installation.
2. Turn the steering wheel fully to the left to provide access to the working area.



3. Carefully use a flathead screwdriver to remove the lower push clips (x2) that secure the front wheel arch liner.




4. Open the front-most rocker panel bolt access cover, and then remove the bolt and washer.



5. Carefully use scissors to remove the open access cover from the rocker panel.

Warning: To avoid personal injury, wear cut-resistant gloves during this step.

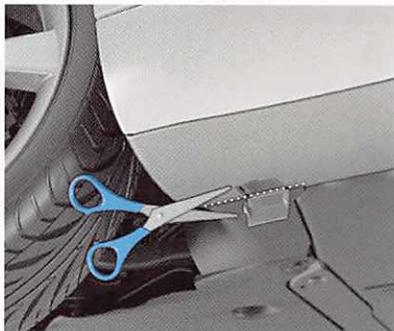


6. While carefully pulling the lower portion of the front wheel arch liner away from the wheel well, install the U-nuts (x2) over the holes in the rocker panel. Make sure the holes are aligned.





7. **IF INSTALLING SPLASH GUARDS:** Remove the adhesive backing from the splash guard, and then align the splash guard with the mud flap so that the holes are aligned. Once aligned, apply pressure along the mud flap to ensure it is adhered to the splash guard.


Note: Splash guard are recommended if you drive on roads where salt, sand, or gravel are commonly used to improve road conditions.

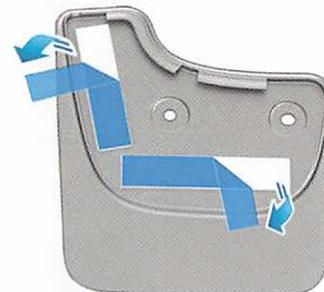

8. Place a washer over the screws (x2), and then install the screws to secure the mud flap/splash guard to the U-nuts in the front wheel arch liner. Tighten the screws to 1.5 Nm (1 ft-lbs).

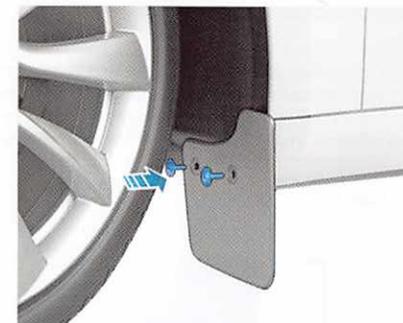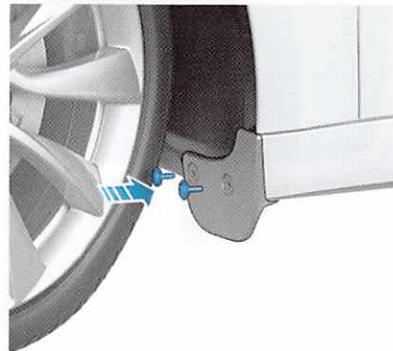

9. Install the bolt that secures the bottom of the mud flap to the lower rocker panel cover. Tighten the bolt to 5 Nm (4 ft-lbs).

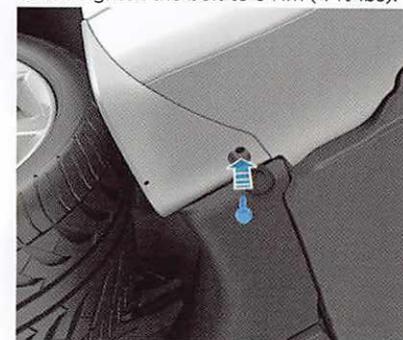

10. Perform this procedure again on the right side of the vehicle to install the right mud flap or splash guard.

Note: This procedure and illustrations detailed how to install the left mud flap and splash guard. Instructions for the right side are mirrored.

